


### 910CL Optical Fiber Cleaver


- Capable of cleaving single mode and multimode fibers.
- Same adapters as the 910FS.
- Shipped in soft carry case with adjustment tools/instructions.
- Cleaving wheel is specified for 12,000 cleaves.
- Cleaving wheel is user serviceable/replaceable

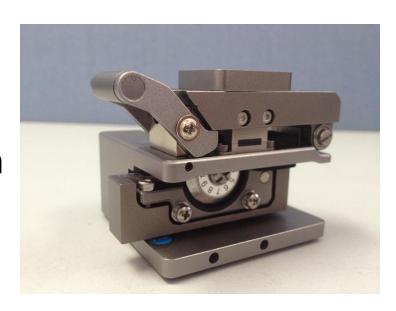




#### **Operation**

- 1. Strip and clean buffer from fiber.
- 2. Insert fiber into the appropriate fiber adapter (250, 900).
- 3. Open cleaver clamp.
- 4. Move cleaving wheel to the position closest to you.
- 5. Insert fiber adapter into the cleaver.

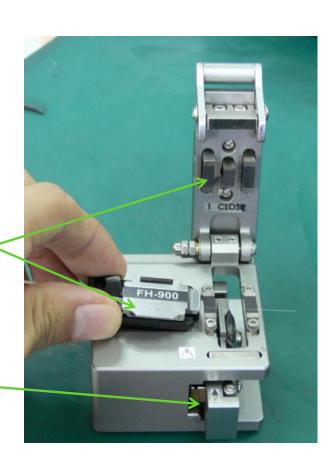



- 6. Close the cleaver clamp.
- 7. Slide the cleaving wheel mechanism away from you.

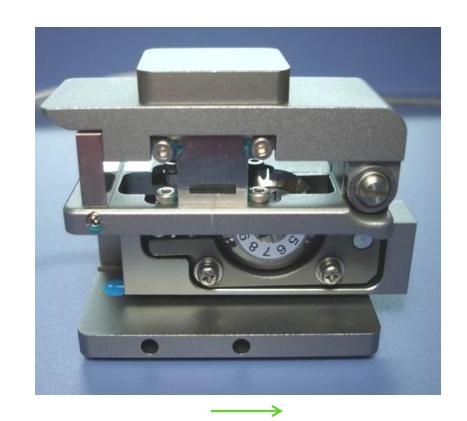



- 8. Open the cleaver clamp mechanism.
- Discard the cut fiber end in an appropriate storage device.
- 10.Remove the fiber adapter from the cleaver with the cleaved fiber – do not let the cleaved fiber end touch anything.

Contact Greenlee sales or your representative for pricing.



## Sales and Technical Support

#### Messkom Vertriebs GmbH

Awarenring 38 D-85419 Mauern

Tel: 0049 (0)8764 / 948 430 Fax: 0049 (0)8764 / 948 433

Email: info@messkom.de



www.messkom.de



